

3.1.3 Controller Parameters

You can view controller parameters by pressing the ▼ button further below. First the parameter number shows momentarily and then its value does. The parameter number flashes momentarily every five seconds for better orientation.

The parameters can be divided into three main groups:

- Parameters determining controller functions. These parameters can be set to direct the control process. There are target power factor, control period, reconnection delay time, etc.
- Parameters indicating controller's current condition. This is the alarm (parameter 40), error condition (parameter 45), and control time (parameter 46). These parameters' values are set by the controller and they identify nonstandard or error conditions and monitor progress of the control process in detail.
- Total connected times recorded and numbers of connections of each compensation banks, or sections (parameters 43 and 44, respectively). These values are set by the controller and the operator can only clear them.

The parameters are organized by ordinal number in the main branch. Some of the parameters (parameter 25 – sectional power, 26 – fixed sections, 30 – alarm setting, 40 – state of alarm, 43 – total connected times, 44 – number of sections connected) are located on side branches for easier navigation. You can switch to a side branch with selected parameters by pressing button ► and switch back to the main branch in the same way. Side branch parameter displayed are identified by a dash between the parameter number and value. For example: in the main branch, while showing parameter 26 (fixed sections), you will see **D I C** (section 1 is a capacitive compensation one); if you want to display conditions of the other sections, you need to switch display to the side branch by pressing button ►; the display will change to **D I - C** and now you can move up and down the branch, through all sections' values. Pressing button ► again returns display to the main branch (the dash disappears).

Pressing button **M** (measurement) returns to the instantaneous value display mode. The controller gets back to this mode automatically in about 30 seconds from the last press of button.

Exception: In the **Manual** mode the parameter values cannot be viewed. Instantaneous output values are displayed on pressing button ► — see description further below.

3.3 Test and Error Messages

In the instantaneous value display mode a test or error message pops up in place of a power factor value in some situations. In these situations, if the value shown does not represent power factor, the **COS** LED flashes.

3.4 Indication LEDs

Besides the numeric display and adjacent LEDs, **COS**, **A**, **V**, the front panel has some more indication LEDs.

3.4.1 Output State Indication

The array of LEDs at the top right of the front panel show the current state of output relays. Each LED is assigned a number from 1 to 8, and if lit, they indicate closed contacts of the corresponding output relay.

If a LED is flashing, it means the controller wants to connect the output, but it has to wait for the delay time to elapse. The output relay contacts are open and they will be closed as soon as the reconnection delay time has elapsed.

An exception is the power-up display test to check correct operation of all display elements. In this test the display shows **ESE** and all indication LEDs come on. All output relays stay open while the test is running.

3.4.2 Trend Indication

These LEDs show the magnitude of deviation of the true instantaneous reactive power in the power system from optimum reactive power value which would correspond to the specified value of required power factor.

If the deviation is smaller than a half of the reactive power value of the smallest capacitor, both LEDs are dark. If the deviation is greater than a half of, but smaller than, the reactive power value of the smallest capacitor, the corresponding LED flashes — if lagging (undercompensation), the **IND** LED flashes; if leading (overcompensation), the **CAP** LED flashes. If the deviation exceeds the value of the smallest capacitor, the corresponding LED is permanently lit.

Exceptions to these LEDs' meanings are the following situations:

- measurement U and I method of connection is not defined (parameter 16)
- automatic connection configuration detection process is in progress
- automatic section power recognition process is in progress

If the method of connection is not defined, both LEDs flash; they are dark in the other two situations.

3.4.3 Indication of Manual Mode

Flashing **Manual** LED indicates that the controller is in the manual mode. The controller's control function is disabled.

If this LED is dark and display is in the **Measurement** mode, the controller is in its standard control mode or it is carrying out automatic connection configuration detection process or automatic section power recognition process.

3.4.4 Indication of Backfeed (Power Export)

The **Export** LED indicates the power transmission direction. If it is dark, the power is flowing from the assumed power supply to the appliance. If the LED is lit, the power is flowing in the opposite direction.

3.4.5 Alarm Indication

For non-standard events signalling, any of two highest output relays can be used. For this, it is necessary to select and set alarm relay function first (parameter 26). Then this relay's operation can be set up as described in parameter 30.

Flashing **Alarm** LED indicates this relay's active state.condition.

4. 4. Controller Setup

To achieve optimum compensation in accordance with character of the load controlled, the controller has a number of parameters that govern its operation. Table in chapter 5 shows a list of the parameters. Detailed description of all parameters can be found at *Operating Manual* (www.kmbssystems.eu).

4.1 Parameter Editing

The controller's parameters are set to default values, which are shown in table in chapter 5, when shipped. To achieve optimum compensation results, it is sometime necessary to change some of the values in correspondence with particular requirements; in the other situations it is at least necessary to enter the measurement voltage type (phase or line) and current transformer turns ratio, within installation of the instrument.

If parameter edit is enabled (see next chapter), you should proceed as follows:

- Find parameter you want to edit by pressing the ▲, ▼ buttons repeatedly.
- Press button ► and hold it down until the display starts flashing.
- Release button ► and set the value desired with the ▲, ▼ buttons. Some values can be incremented or decremented continuously by holding down the ▲ or ▼ button.
- When the value desired is displayed, press button ►. The value will be saved in the controller's memory, the display stops flashing and editing is thus complete.

4.2 Clearing Recorded Measurement Values

Recorded measurement values can be cleared in an analogous way:

- Scroll to the value you want to clear using the ▲, ▼ and ► buttons.
- Press the ► button and hold it pressed until the displayed value starts flashing.
- Release the ► button and by pressing the ▲ or ▼ button change display to show **CLr** (= clear). The following press of the ► button will clear the value.

Clearing a value clears all the other values in its group and starts over their evaluation.

4.3 Enable / Disable Parameter Edit

When shipped, the controller has the Parameter Edit feature enabled, that means the parameters can be edited freely on power supply voltage connection as desired. After being put in operation, Parameter Edit can be disabled to protect the controller against unauthorized changes to its mode of operation.

To see if Parameter Edit is disabled or enabled, check parameter 00. It can contain the following:

Ed=0 edit disabled

Ed=1 edit enabled – parameters can be edited, recorded measurement values can be cleared

If Parameter Edit is locked, you can unlock it using the following procedure, which is similar to editing the controller's parameters:

- Switch controller to parameter display mode by pressing button **P** to display parameter 00 - **Ed=0** is displayed (controller must not be in the **Manual** mode).
- Press button **P** and hold it down until the last character on the display starts flashing. A digit between 0 and 9 will be shown on the last digit position. As an example you can imagine 5 is displayed so the display shows **Ed=5** with the **5** flashing.
- Press the following sequence: ▼, ▲, ▲, ▼. If **5** was shown as the last display digit, it would change to **4** - **5** - **5**, so the same value is shown at the end as at the beginning.
- Press button **P**. The display will show **Ed=1**, indicating correct password and enabled Parameter Edit while clearing recorded measurement values.

The digit shown while entering the unlocking keypress sequence is random generated by the controller and it is not important for its correctness (it is there only to confuse). Only the sequence of buttons pressed is important.

Parameter Edit mode is enabled until it gets disabled by the operator. Parameter Edit enabled or disabled conditioned is retained in the instrument even on power off.

Parameter Edit can be disabled in a way analogous to enabling it but you press buttons different from the correct unlocking keypress sequence.

4.4 Manual Mode

When installing or testing the controller it may sometimes be required to check the function of each compensation section or it is necessary to put the automatic control process out of operation for a rather long time.

In such situations, you can switch the controller to a mode in which it only carries out measurements and displays the values. You can switch to this mode by pressing buttons ▲ and ▼ and holding them down simultaneously for about 6 seconds (until the **Manual** LED starts flashing). You can switch back to the automatic control mode analogously.

You can **not** view or edit the controller's parameters in the **Manual** mode – you can only close or open each of the controller's outputs.

On switching the regulator to the **Manual** mode, the outputs stay in the state they were in during the control process before switching over the modes. You can then change the states of the outputs manually – after pressing button ► the state of a corresponding output is shown (for example **D I - D**, which means output 1 is off – contacts open) and you can scroll through them all using buttons ▲, ▼ and edit them very much like the instruments' parameters. The outputs' states change while being edited, respecting the reconnection delay time specified.

If the controller is in the **Manual** mode and there is a supply voltage failure, the **Manual** mode is resumed on power recovery. At this, all outputs that were on before the failure get switched on one by one again (the states of outputs are remembered).

Warning! Alarm actuation (parameter 30) is disabled in **Manual** mode!

4.5 Controller Initialization

In some situations it may be necessary to put the controller back to its default settings with which it is shipped. You can do this using controller *initialization*. After initialization has been run, the initial test starts too, that means the controller carries out all the operations as if the power supply voltage is introduced.

The controller's parameters are set to the values shown as default in chapter 6 on initialization, except the following parameters:

- metering current transformer nominal secondary value (13)
- type of measurement voltage (phase or line, 15)

These parameters remain unchanged, at the values specified before initialization.

The counters of connection time and switching operations (parameters 43, 44) are not affected by initialization either.


You can start the controller initialization by pressing buttons ▲, ▼ and ► simultaneously and holding them down for about 6 seconds. The controller will first disconnect all sections connected and run the initial test – this is when you can release the buttons. Then it will carry out the initialization routine proper and since parameter 16 value is not defined, it will start the automatic connection configuration detection process.

5. Novar-10xx Controller Parameters


No	Name	Range	Default	Comment
0	parameter edit enable/disable	0 / 1	1	see Enable / Disable Par. Editing
1	target power factor (tariff 1)	0.80 L + 0.80 C	0.98 L	
2	control time when undercompensated (tariff 1)	5 sec + 20 min	3 min	No "L": control time reduction by squared proportion "L": linear control time reduction.
3	control time when overcompensated (tariff 1)	5 sec + 20 min	30 sec	No "L": squared control time red. "L": linear control time reduction
4	control bandwidth	0.000 + 0.040	0.010	
5	offset power	(0.001 + 5.5 kvar) x CT ratio x VT ratio	0	Value corresponds to U _{NOM} specified (parameter 18); positive for capacitive, negative for inductive values. Displayed when parameter 63 is active only.
6	tariff 2 enable/disable	0 – 1 – E	0	
7 + 11	like param. 1 + 5, but for tariff 2	same as par. No. 1 + 5	-	not shown unless tariff 2 enabled
12	metering current transformer primary side nominal value	5 - 9950 A	undefined	
13	metering current transformer secondary side nominal value	1 A - 5 A	5	
14	reconnection delay time	5 sec + 20 min	20 sec	
15	measurement voltage type – phase-neutral or phase-phase	LN (phase) – LL (line)	LN	correct setting essential for automatic connection detection process
16	method of U and I connection	6 combinations	undefined	see parameter description
17	VT turns ratio	no VT or 10 + 5000	--- (no VT)	
18	system nominal voltage U _{NOM}	50 + 750 V x VT ratio	230 / 400 V	established by controller in automatic connection detection process
20	automatic section power recognition process	A(auto) – 0 (no) - 1(yes)	A	
21	switching program, linear switching mode	12 combinations or „L“	undefined	not shown if automatic section recognition process enabled
22	smallest capacitor nominal power (C/KMIN)	(0.007 + 1.3 kvar) x CT ratio x VT ratio	undefined	not shown if automatic section recognition process enabled
23	number of capacitors	1 – 14	6 / 8 / 14	not shown if automatic section recognition process enabled
25	sectional nominal power	(0.001 + 5.5 kvar) x ratio x VT ratio	undefined	Corresponds to U _{NOM} . Positive for caps (lead), negative for chokes (lag)
26	fixed sections	regulated / 0 / 1	all regulated	„F“/„H“/„A“ for 2 highest sect. only
27	power factor limit for compensation by choke	0.80 L + 0.80 C	undefined	No compensation by chokes unless this parameter specified.
30	alarm setting	0 / indication only / actuation only / indication and actuation	undercurrent, voltage loss and section error indication & actuation	1...undercurrent 9... comp. error 2...overcurrent 10... export 3... voltage loss 11... no. of connections > 4...undervoltage 12... section error 5...overvoltage 13... section error 6... THDI > 14... ext. alarm 7... THDU > 13...overheated 8... CHL > 14... ext. alarm
31 + 37	alarm thresholds: undervoltage, overvoltage, THDI, THDU, CHL, number of connections and temperature	-	-	not displayed if the alarm not set up
40	alarm instantaneous condition			Indicates current state of alarm.
43	section connection time			in thousands of hours
44	number of section connections			in thousands
45	instrument failure condition			
46	Instant. condition of control time			time until next control intervention[sec]
55	power system frequency	A (auto) – 50 Hz – 60 Hz	A (auto)	
56	average value eval. window size	1 min + 7 days	7 days	applies to Acos, APac, APRe
57	min/max value eval. window size	1 min + 7 days	15 min	for mincos,maxPac, maxPRe, maxdPre
58	Celsius/Fahrenheit temp. mode	°C – °F	°C	
59	cooling enable threshold	+10 + +60 °C	+40 °C	not displayed if cooling not set
60	heating enable threshold	-30 + +10 °C	-5 °C	not displayed if cooling not set

5. Wiring Examples

Novar-1007 – installation

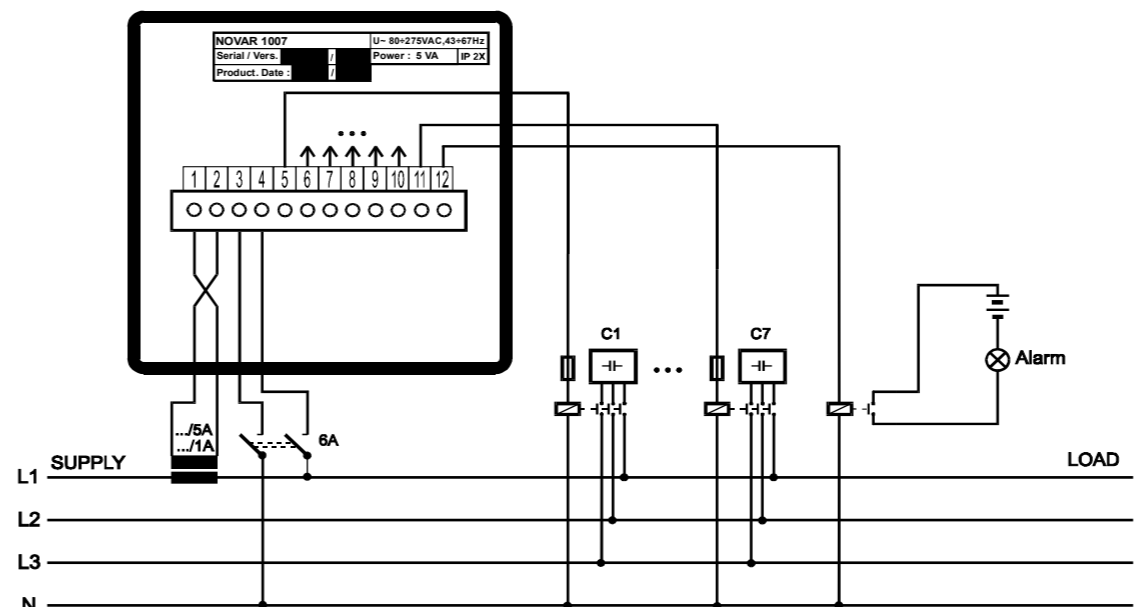

Novar-1007D – Installation

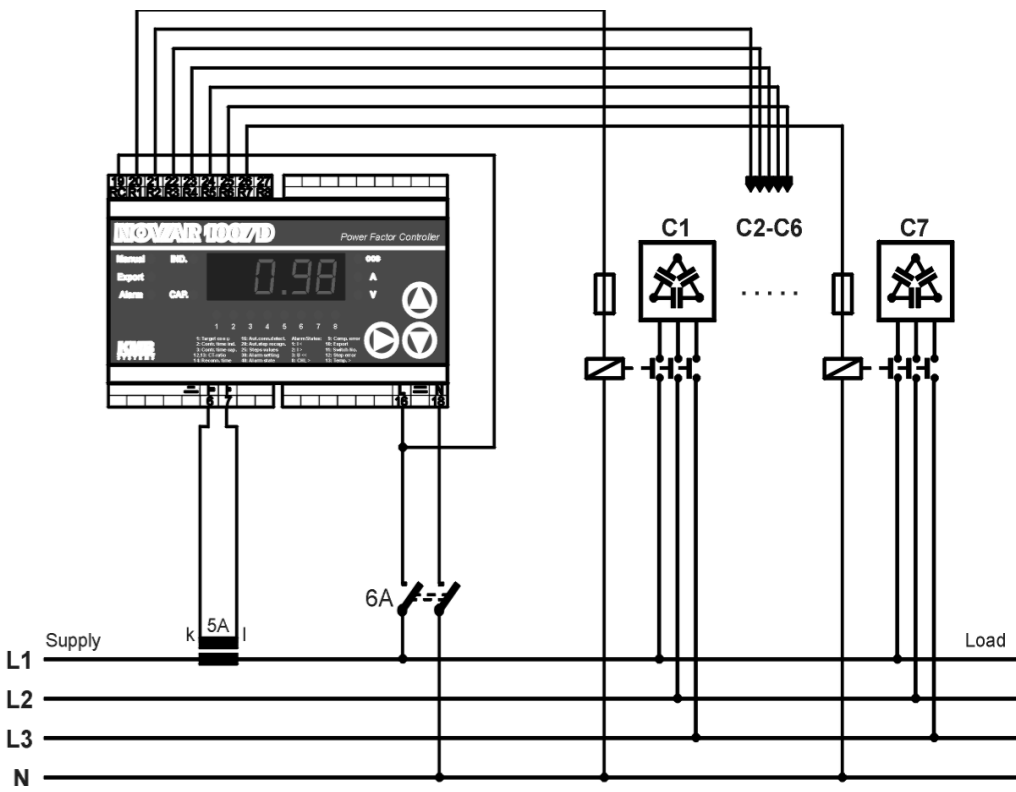

7. Technical Specifications

parameter	Novar	
	1005 / 1007	1005D / 1007D
power factor desired	0.80 ind. + 0.80 cap.	
connection time	5 + 1200 seconds	
reconnection delay time	5 + 1200 seconds	
smallest capacitor current	(0.02+2 A) x CT ratio	
connection & section power setting	automatic or manual	

Ranges, Accuracy	
measurement / supply voltage	80+275 V AC, 43 + 67 Hz, 5VA
voltage measurement accuracy	+/-1% of range +/- 1 digit
measuring voltage loss response time	<= 20 ms
measurement current (galv. isolated)	0.02 + 7 A
peak overload	70 A / 1 second; maximum repetition frequency > 5 minutes
current input serial impedance	< 10 mOhm
current measurement accuracy	+/- 0.02A +/- 1 dig. +/- 0.002A +/- 1 dig
max. phase angle error (PF & powers measurement)	+/-1° at I > 3 % of range, otherwise +/-5°
current harm. & THDI meas. accuracy	±5% ± 1 digit (for U, I > 10 % of range)
temperature meas. range / accuracy	-30 + 60 °C, ± 5 °C
number of output relays	6 / 8
output relay load rating	250 V AC / 4 A
overvoltage class / level of pollution	III-2 in compliance with EN 61010-1

Operating Conditions	
working environment	class C1 in compliance with IEC 654-1
operating temperature	40° + +60°C
relative humidity	5 to 100 %

EMC	
noise suppression level	in comply with EN 50081-2, EN 55011/class A, EN 55022/class A
immunity	in compliance with EN 61000-6-2

Physical		
enclosure	• front panel	IP40 (IP54 option)
	• back panel	IP 20
dimensions	• front panel	96 x 96 mm
	• built-in depth	80 mm
	• instalation cutout	92'1 x 92'1 mm
mass	max. 0.3 kg	